

ATTACHING THE CHIP-PALA SCOOP HOLDER TO A TEXICAN CHIP WARMER

*"No te preocupes.
¡Es fácil!" - Carmelita*



START HERE



1



SLANT SLIGHTLY
IF MOUNTED ON
SIDE

DECISION:

The scoop holder can be mounted on either the front or the side of the machine.



2

CAUTION:

Remove packet of screws from the holder. Do NOT remove red tape at this time.



ITEMS NEEDED:

- Scoop Holder w/Metal Screws (4 provided)
- Drill
- 1/8" Drill Bit
- 1/4" Socket Drill Bit
- Pencil



3

ACTION:
Mark holes using holes in holder as guides.



TOOL:
Drill 1/8th" holes at marks.

4




5

ACTION:
Remove red backing.

CAUTION:
Line up ALL the holes FIRST and THEN press into place.

6

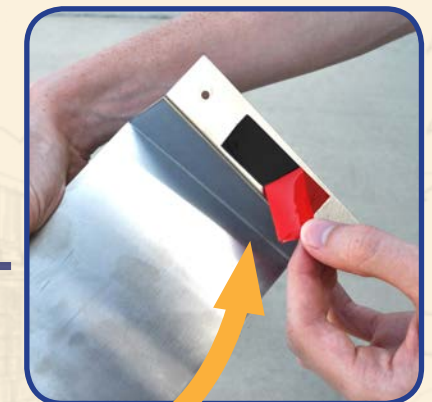

SUPER STICKY



CHANGE DRILL BIT

TOOL:

Use drill to screw the screws (4) into holes.

7



FINISHED!

Texican
SINCE 1987